


Repair manual


Exchange the airborne device

Step 1: locate the airborne device

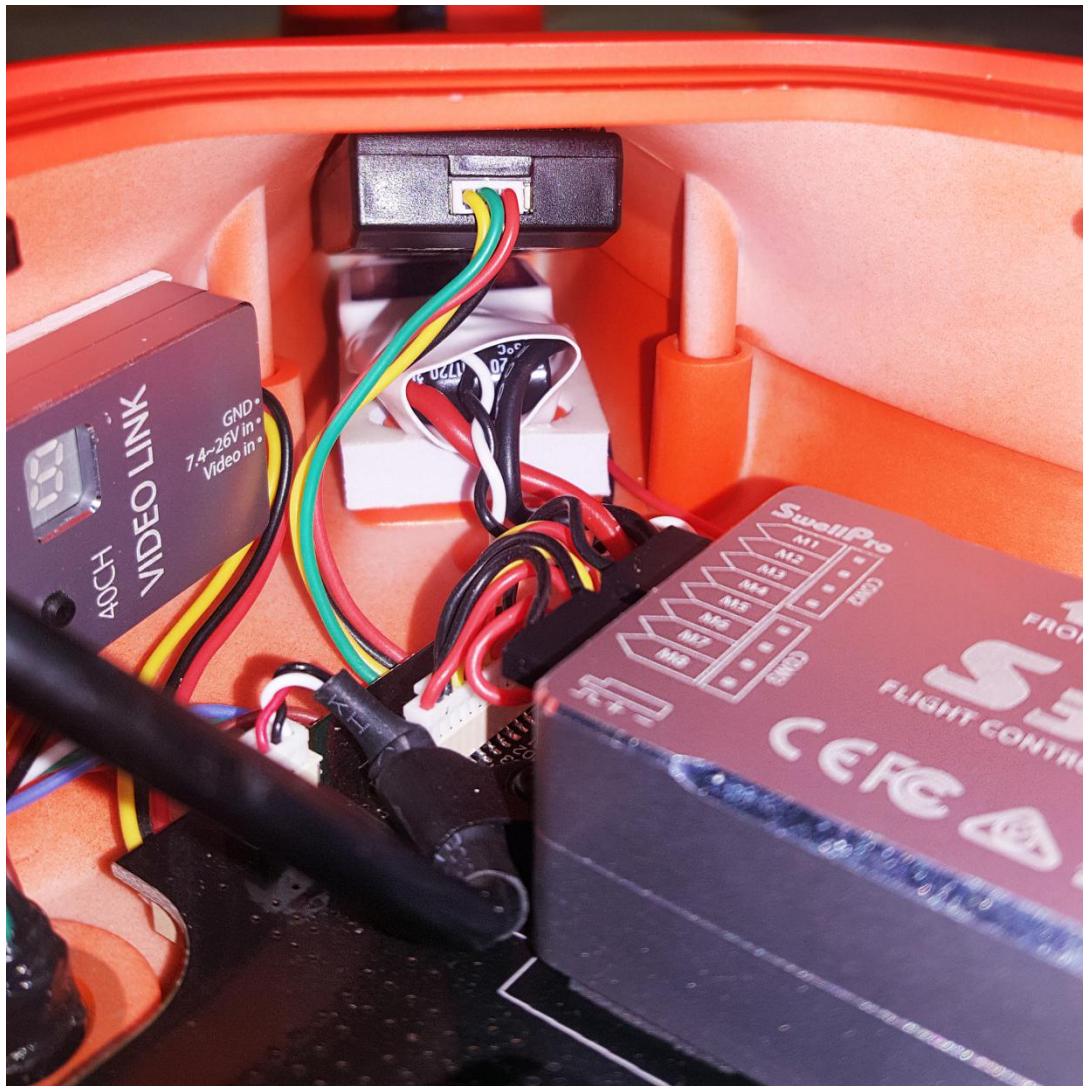

The airborne device is located at the left of the drone, inside of the arm shaft.

Step 2: take out the airborne device

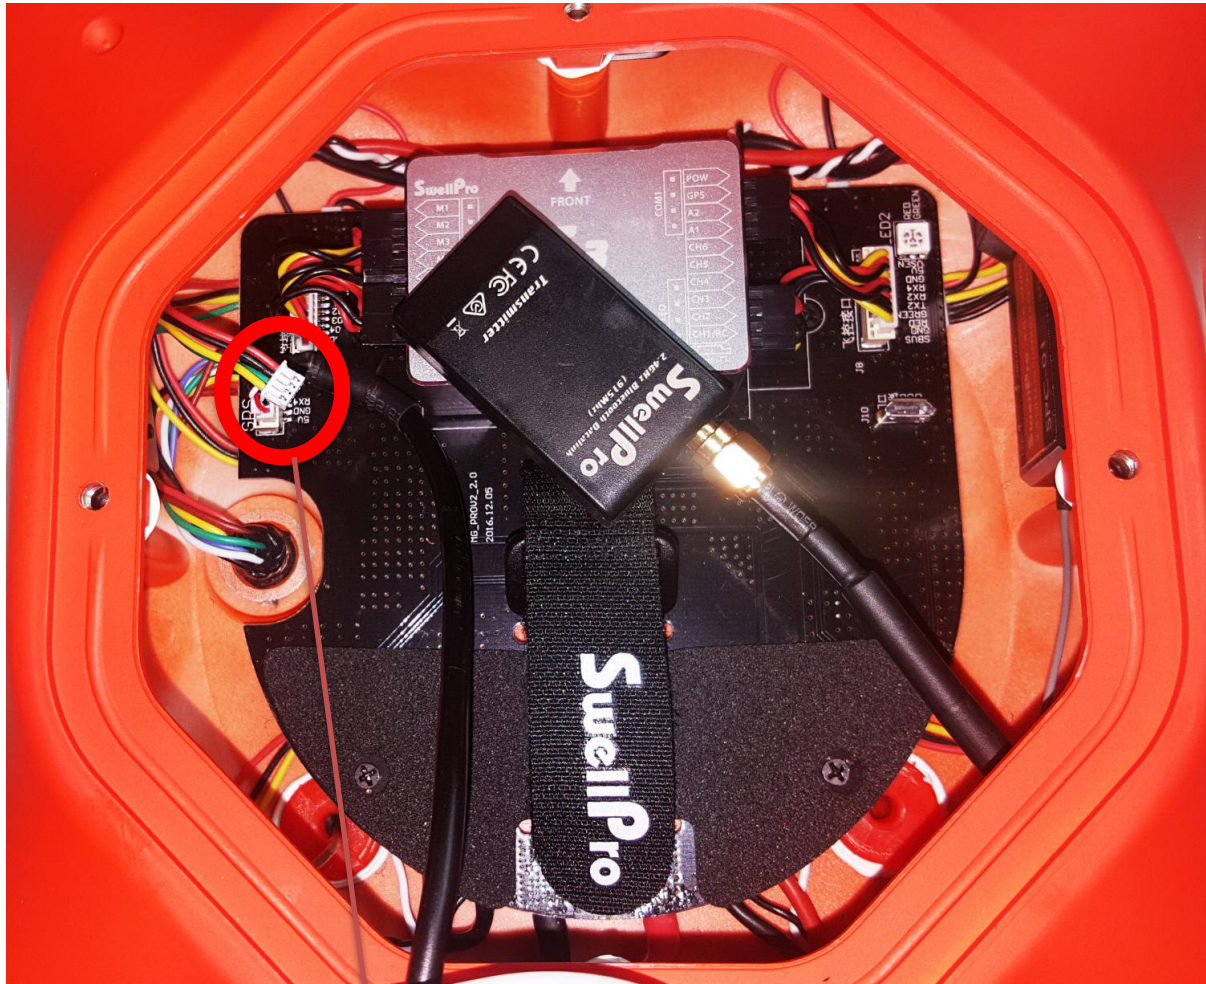

The airborne device is fixed by the Velcro, can be removed directly. Please unplug the wires first.

Step 3: prepare the new airborne device



Paste the Velcro surface on the back of the airborne device.



Step 4: install the airborne device



Connect the airborne device by plugging the connector; use the Velcro to fix it.