

Repair manual

Inside the propeller holder

Remove the screw

Tool: hexagonal screwdriver 2.0




Use the hexagonal screwdriver to remove the screws inside the propeller holder.



Propeller  
holder

Shrapnel

Screws

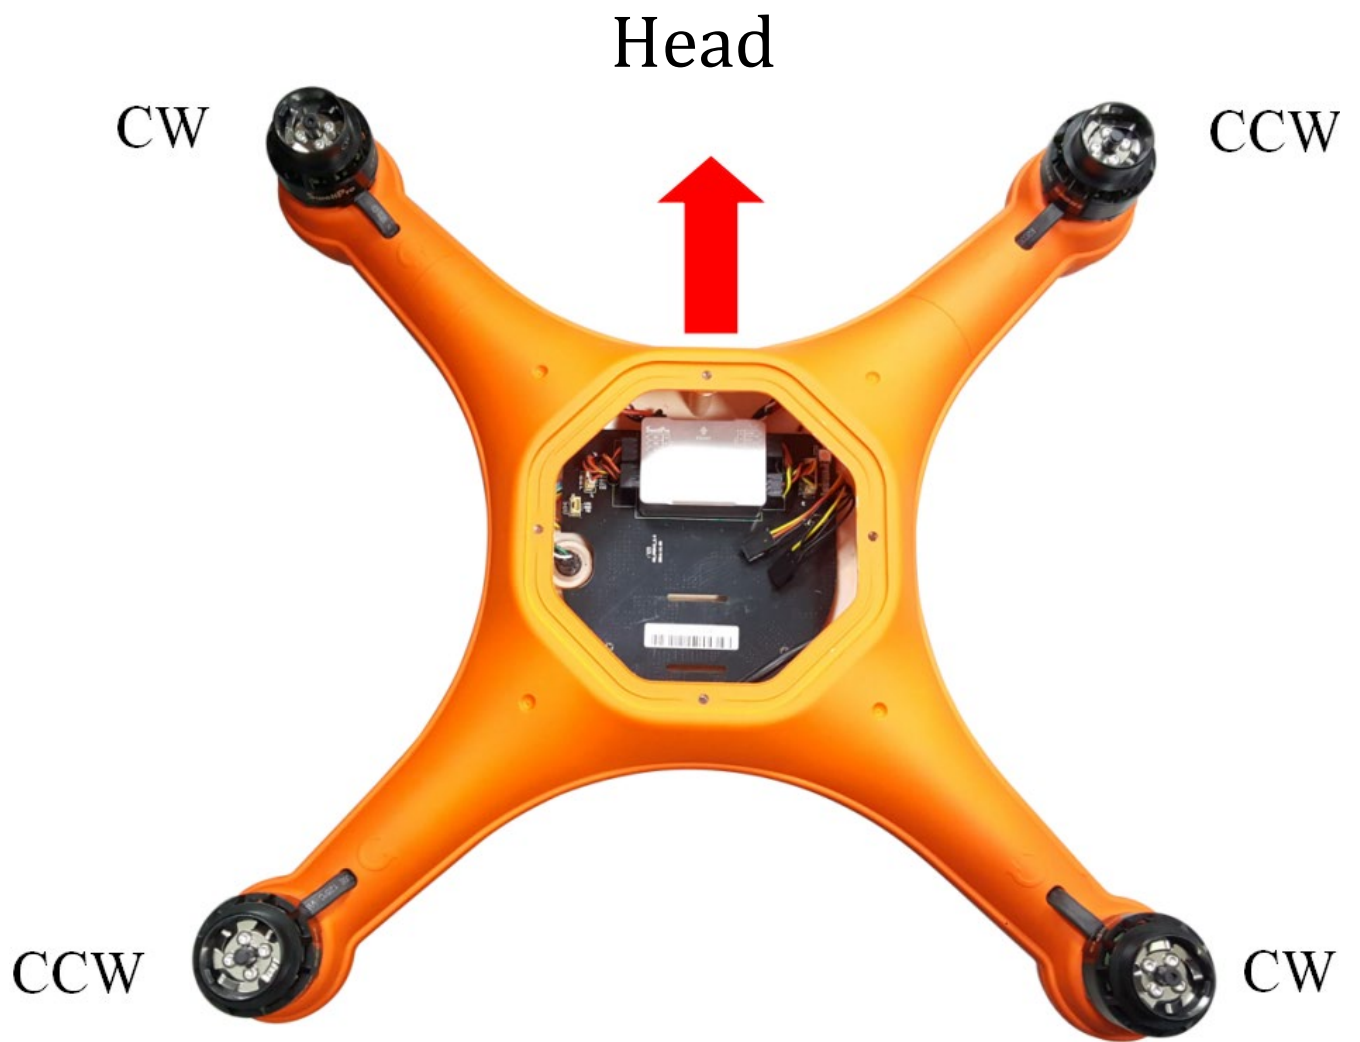

Step 1: propeller holder



Put the propeller holder on



Step 2: shrapnel



Put the shrapnel on the propeller holder

Step 3: turn the screws



Fix the propeller holder and shrapnel by turning the screws on.