


Repair Manual

Remove The Motor

Table Of Content



Step 1: the casing after removing the motor.....	2
Step 2: remove the screws of the gland.....	3
Step 3: remove the silicon pieces	4
Step 4: remove the screws which used for fixed motor.....	5

Step 1: the casing after removing the motor.

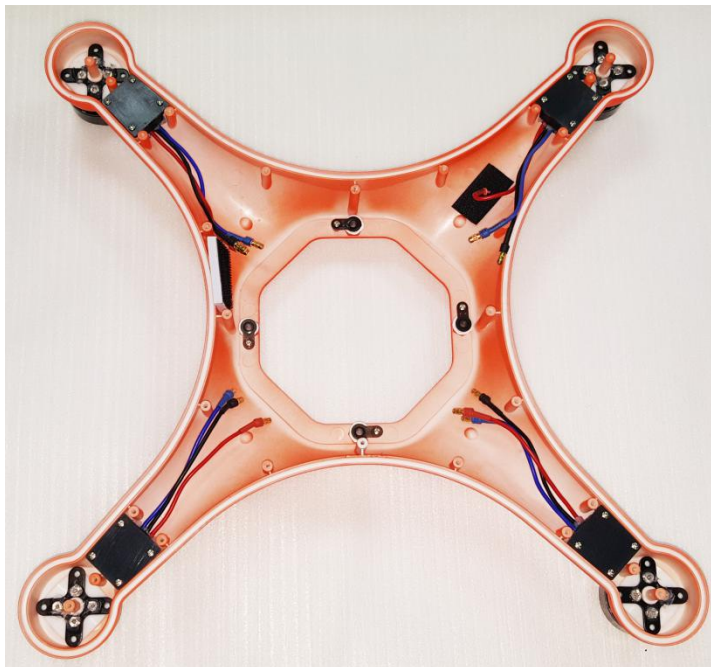


Step 2: remove the screws of the gland

Tool: cross screwdriver #1

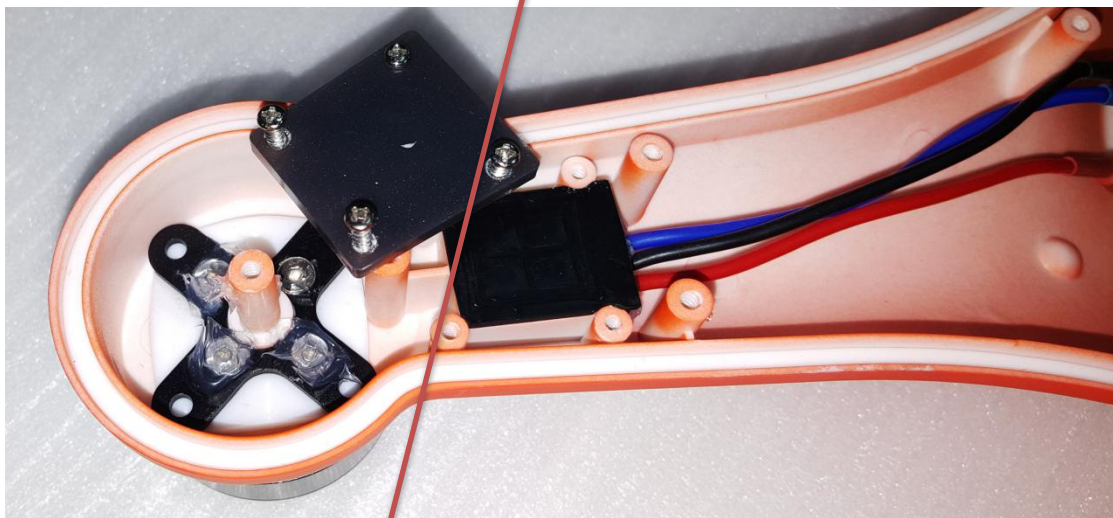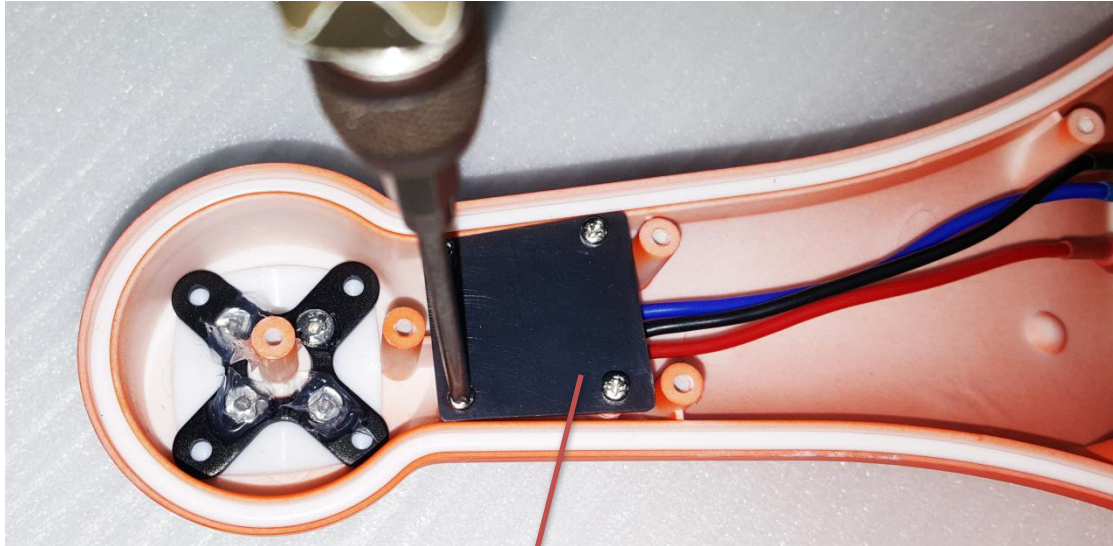

Please remove the 4 screws of the gland



Step 3: remove the silicon pieces

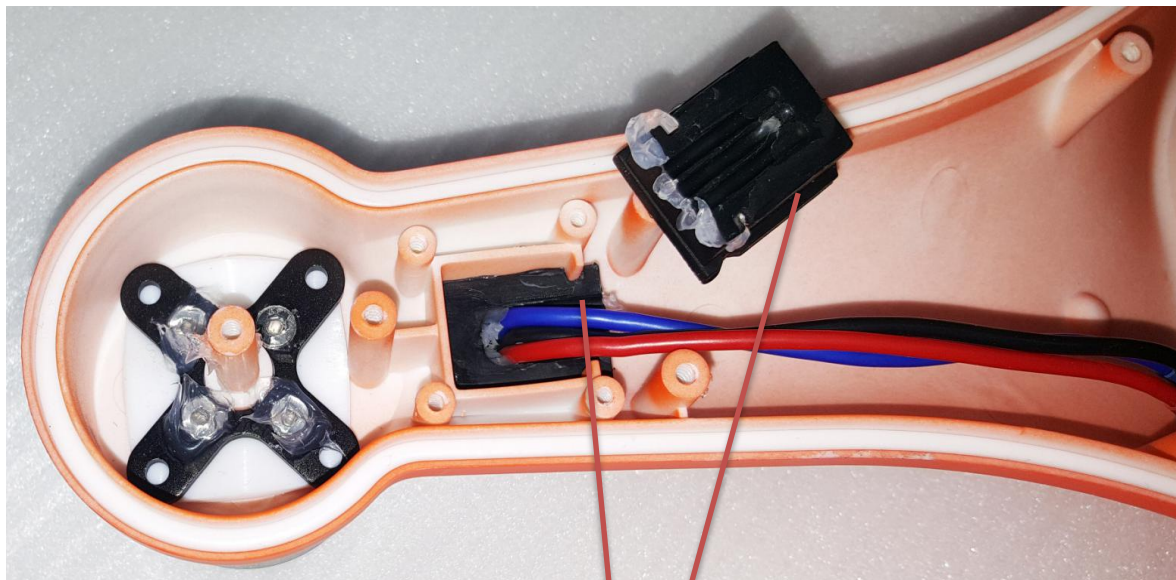

Pull a little bit hardly to remove the silicon pieces

Step 4: remove the screws which used for fixed motor

Tool: hexagonal screwdriver 2.0

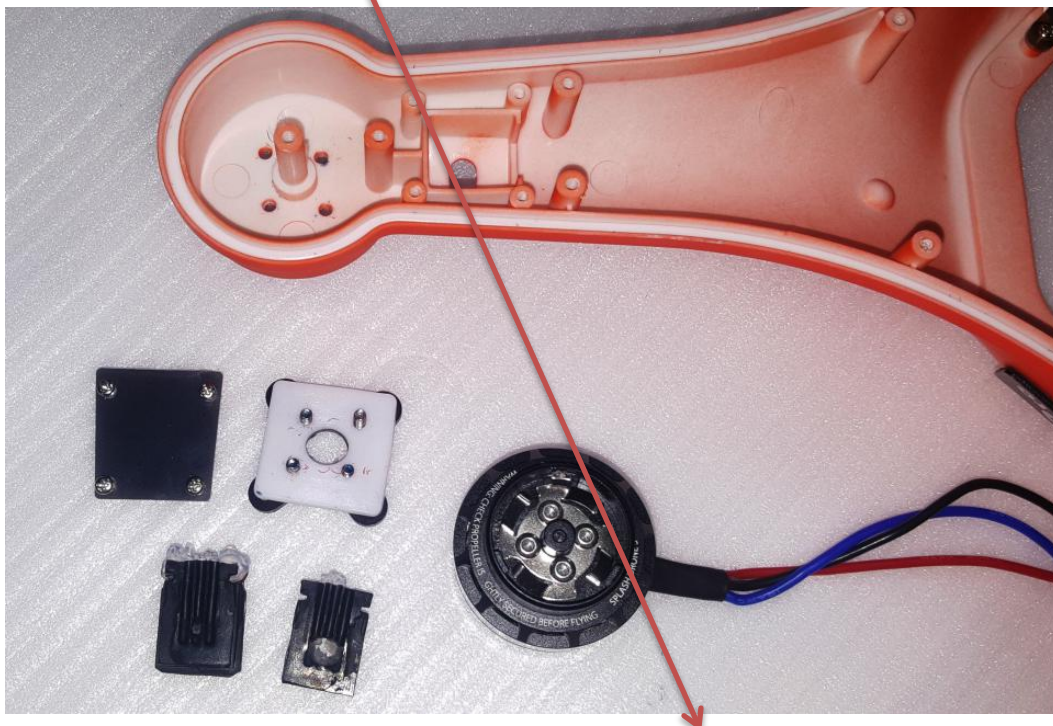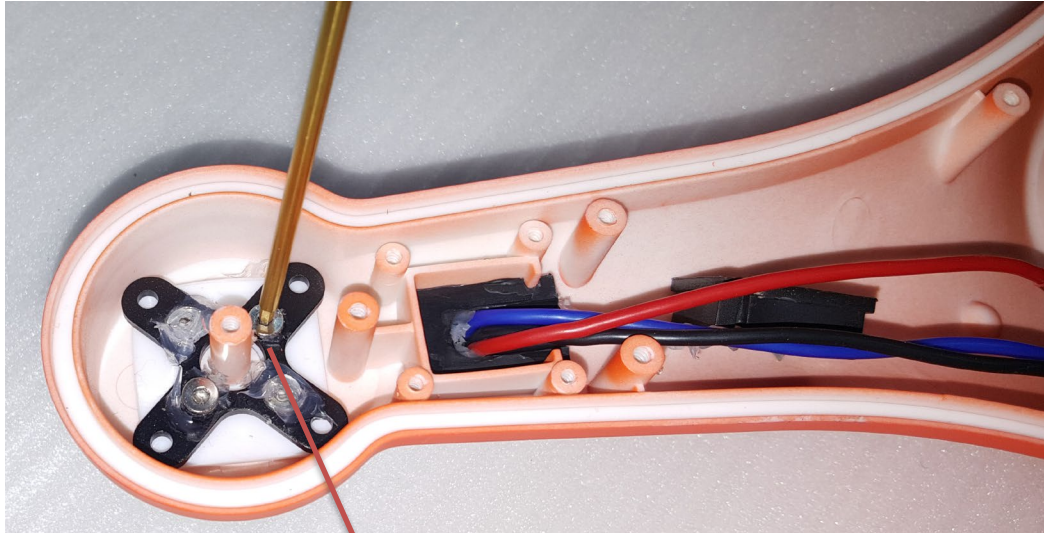

Use the hexagonal screwdriver to remove the screws, there is some glass cement on the screws, can be moved by the screwdriver